

1986 Bale Sensor



For continuous monitoring during baling. Comes with 30' cable to run from the sensor mounted in the bale chamber to the meter in the cab. May be used with any model, but is recommended to use with Model FX-2000.

Also available as 1986/40 with 40' cable for larger balers.

